


Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.




IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS, AND CAUTIONS. USE THIS PRODUCT CORRECTLY, AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY.

1. SAFETY INSTRUCTIONS

1.1 ELECTRICAL SAFETY

- ❑ **WARNING!** It is the responsibility of the owner and the operator to read, understand and comply with the following:
You must check all electrical products, before use, to ensure that they are safe. You must inspect power cables, plugs, sockets and any other connectors for wear or damage. You must ensure that the risk of electric shock is minimised by the installation of appropriate safety devices. A Residual Current Circuit Breaker (RCCB) should be incorporated in the main distribution board. We also recommend that a Residual Current Device (RCD) is used. It is particularly important to use an RCD with portable products that are plugged into a supply which is not protected by an RCCB. If in any doubt consult a qualified electrician. You may obtain a Residual Current Device by contacting your Sealey dealer.
You must also read and understand the following instructions concerning electrical safety.
- 1.1.1 The Electricity at Work Act 1989 requires that all portable electrical appliances, if used on business premises, are tested by a qualified electrician, using a Portable Appliance Tester (PAT), at least once a year.
- 1.1.2 The Health & Safety at Work Act 1974 makes owners of electrical appliances responsible for the safe condition of those appliances and the safety of the appliance operators. If in any doubt about electrical safety, contact a qualified electrician.
- 1.1.3 Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply. See 1.1.1 and 1.1.2 and use a Portable Appliance Tester.
- 1.1.4 Ensure that cables are always protected against short circuit and overload.
- 1.1.5 Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that none is loose.
- 1.1.6 Important: Ensure that the voltage marked on the appliance matches the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating at right.
- 1.1.7 **DO NOT** pull or carry the appliance by the power cable.
- 1.1.8 **DO NOT** pull the plug from the socket by the cable.
- 1.1.9 **DO NOT** use worn or damaged cables, plugs or connectors. Immediately have any faulty item repaired or replaced by a qualified electrician. When a BS 1363/A UK 3 pin plug is damaged, cut the cable just above the plug and dispose of the plug safely.
Fit a new plug according to the following instructions (UK only).
 - a) Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.
 - b) Connect the BROWN live wire to the live terminal 'L'.
 - c) Connect the BLUE neutral wire to the neutral terminal 'N'.
 - d) After wiring, check that there are no bare wires, that all wires have been correctly connected, that the cable outer insulation extends beyond the cable restraint and that the restraint is tight. Double insulated products, which are always marked with this symbol , are fitted with live (brown) and neutral (blue) wires only. To rewire, connect the wires as indicated above - **DO NOT** connect either wire to the earth terminal.
- 1.1.10 Products which require more than 13 amps are supplied without a plug. In this case you must contact a qualified electrician to ensure that a suitably rated supply is available. We recommend that you discuss the installation of an industrial round pin plug and socket with your electrician.
- 1.1.11 If an extension reel is used it should be fully unwound before connection. A reel with an RCD fitted is preferred since any appliance plugged into it will be protected. The cable core section is important and should be at least 1.5mm², but to be absolutely sure that the capacity of the reel is suitable for this product and for others which may be used in the other output sockets, we recommend the use of 2.5mm² section cable.

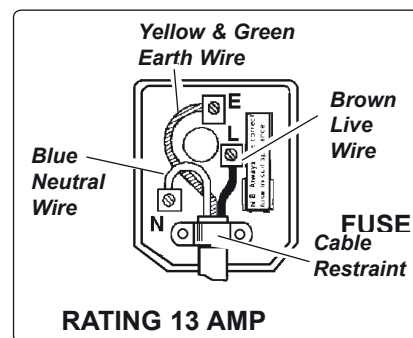

1.2 GENERAL SAFETY INSTRUCTIONS

- ✓ Familiarise yourself with the applications and limitations of the heater.
- ✓ Ensure the heater is in good order and condition before use. If in any doubt do not use the unit and contact an electrician.
- ✓ Only use recommended attachments and parts. To use unauthorised items may be dangerous and will invalidate your warranty.
- ✓ Check that element guards are in place, undamaged and firmly attached.
- ✓ Keep tools and other items away from the heater when it is in use.
- ✓ Keep the work area clean and clear of unnecessary items.
- ✓ Keep children and unauthorised persons away from the heater, as it gets **very hot**.
- ✓ Disconnect from mains before moving or attempting any cleaning or maintenance.
- ✗ DO NOT get the heater wet or use in damp or wet locations or areas where there is condensation.
- ✗ DO NOT locate the heater below the power outlet.
- ✗ DO NOT move the heater whilst in operation or even when still warm.
- ✗ DO NOT touch the heater elements, even when cold.
- ✗ DO NOT disassemble the heater for any reason. The heater must be checked by qualified personnel only.
- ✗ DO NOT use this product to perform a task for which it has not been designed.
- ❑ **WARNING! If a fuse blows, ensure it is replaced with an identical fuse type and rating.**
- ✓ When not in use, store the heater carefully in a safe, dry, childproof location.

2. INTRODUCTION & SPECIFICATIONS

Electric, tripod mounted, heaters with infrared quartz lamps. Reach maximum heat output within seconds of being turned on. Supplied with power cable and 3-pin plug. A totally dry heat with no condensation, no gas, no fumes, so no smell. Ideal for workshops, bars, forecourts or gardens and terraces **if weather protected**.

Model No. LP1500.V2	Supply: 230V – 13A
Maximum Power: 1500W	Height: 0.6-1.6mtr
Minimum Power: -	

Model No. LP3000	Supply: 230V – 13A
Maximum Power: 3000W	Height: 0.8-1.7mtr
Minimum Power: 1500W	



LP1500.V2

LP3000

3. ASSEMBLY

3.1 FITTING LAMP TO THE STAND (FIG 1)

- ☐ **WARNING!** Isolate heater from mains before any assembling and/or maintenance operations are carried out.

3.1.1 Place the locating hole in the lamp's bracket onto the thread situated at the top of the stand.

3.1.2 Secure with plastic wing nut provided.

3.2 ELEMENT REPLACEMENT - LP1500.V2

- ☐ **WARNING!** Never touch the element glass directly with fingers, only touch the ceramic ends or use a soft cloth, otherwise the tube may get damaged.

- ☐ **WARNING!** When removing/replacing the element, take great care not to expose the element to excessive force as this may cause the element to fracture.

3.2.1 Remove the four screws located at each end of the face of the lamp which hold the end reflectors and grill in place. (See fig.2)

3.2.2 Slide the element out from it's clips (See fig.3a) taking care not to stress the attached wires. Loosen the nut on the top of the pillar at each end of the reflector and slide out the forked connector (See fig.3b). The element can now be removed.

3.2.3 Lay the new element on a soft cloth in front of the heater body and connect the wires at either end to the pillars ensuring that the fork connector at the end of each wire is fully inserted between the plain and serrated washers. Retighten the nuts at the top of each pillar.

3.2.4 Insert the new tube into the clips with the wire connections facing downwards. Ensure that the excess loops of wire lie in the voids at either end of the casing and not on top of or underneath the reflector.

3.2.5 Push the end reflectors on to each end of the grill and place the assembly onto the face of the main body. Line up the holes in the end reflectors with the holes in the main body and insert the screws finger tight. Check that there are no wires trapped or showing then tighten the screws.

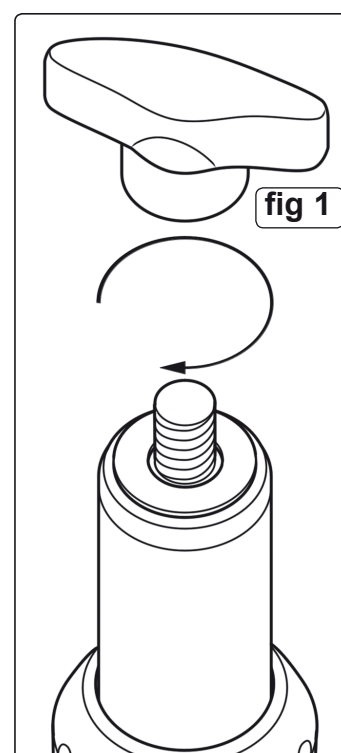


fig 1

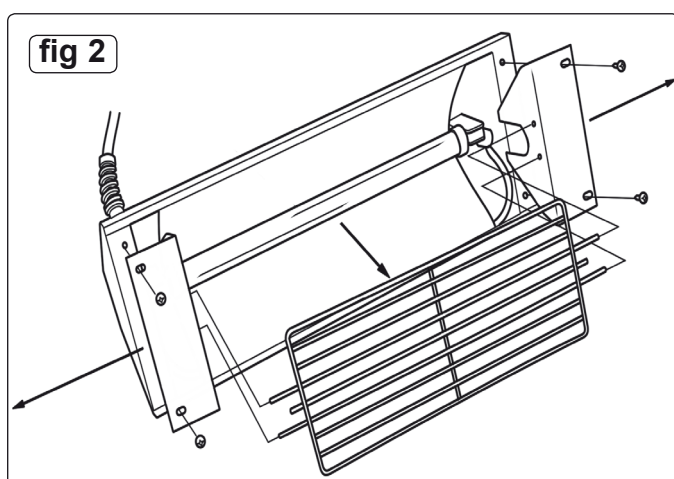


fig 2



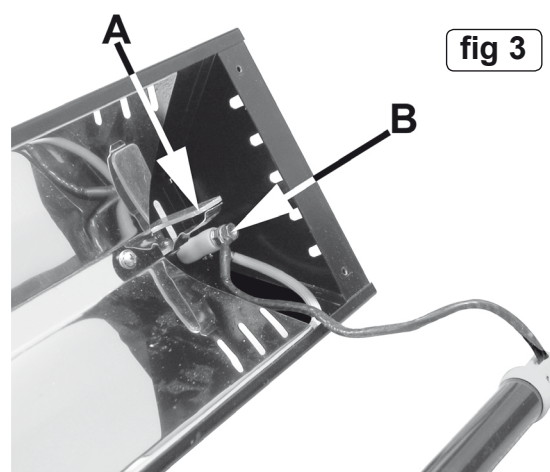


fig 3

3.3 ELEMENT REPLACEMENT - LP3000.

- ❑ **WARNING!** Never touch the element glass directly with fingers, only touch the ceramic ends or use a soft cloth, otherwise the tube may get damaged.
- ❑ **WARNING!** When removing/replacing the element, take great care not to expose the element to excessive force as this may cause the element to fracture.
- 3.3.1 Place the heater face up on a clean work surface.
- 3.3.2 Remove the four screws which retain the grille and lift the grille clear of the main body. (See fig.4)
- 3.3.3 Remove the four screws which retain the plain right hand endplate and lift the endplate clear of the main body. (See fig.4)
- 3.3.4 Remove the four screws which retain the left hand endplate and allow the endplate to rest on the work surface. Do not stretch the wires that connect to the switches as this may result in loose or faulty connections. (See fig.5)
- 3.3.5 The wires at the end of each element should be disconnected from the terminal blocks before attempting to unclip the elements.
- 3.3.6 Referring to fig.5, loosen screw 1c on the terminal block and slide out the forked connector attached to wire 1b which connects to element 1a.
- 3.3.7 Referring to fig.5, loosen screw 2c on the terminal block and slide out the forked connector attached to wire 2b which connects to element 2a.
- 3.3.8 Disconnect the element wires at the other end of the heater in a similar manner.
- 3.3.9 Each element can now be removed from its clips.
- 3.3.10 Insert a new element into the clips with the wire connections facing downwards.
- 3.3.11 Reconnect each element to the terminal blocks making reference to fig.5.
- 3.3.12 Refix the endplate with the switches attached ensuring that no wires are trapped or showing.
- 3.3.13 Refix the plain endplate ensuring that no wires are trapped or showing.
- 3.3.14 Refix the grille and check that the heater is functioning correctly before placing it back into service.

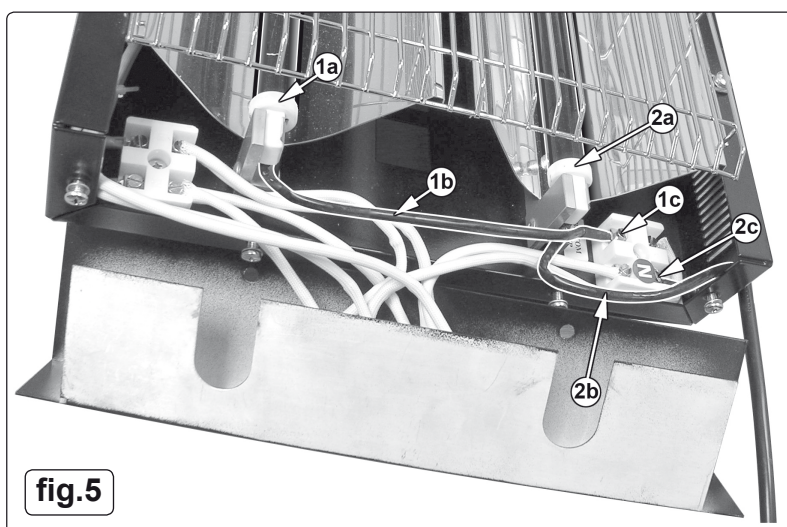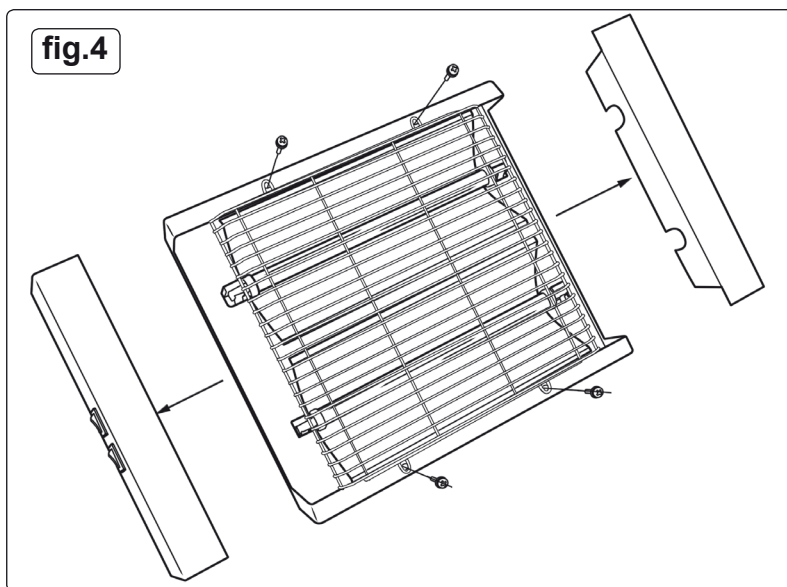

4. OPERATION

Note: The infrared lamp is fragile and therefore it is important that it is not subjected to any unnecessary shocks or vibration and is not moved when it is on.

- ❑ **WARNING! Ensure you have read, understood and applied the safety instructions in Section 1 before using the heater.**

- 4.1 Position the heater at least 1m from any object.
- 4.2 Plug in the heater and switch on.
- 4.3 Model LP3000 has two heats settings:
 - One button switched on initiates the low heat setting.
 - Two buttons switched on initiates the high heat setting.
- 4.4 When the heater is no longer required, switch off and/or unplug the unit.
- 4.5 Allow heater to cool after use before attempting any maintenance or relocation.

- ❑ **WARNING! DO NOT touch the heater when in use as it becomes hot.**

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR



01284 757500



www.sealey.co.uk



01284 703534



sales@sealey.co.uk